



Divine Connect Translation Receiver

WORLDWIDE PATENT PENDING

User Guide

Version 1.1

Models

DC7G, DC7S

Divine Connect LLC
8983 Okeechobee Blvd, Suite 202-125
West Palm Beach, FL 33411, USA

www.divineconnect.com

Table of Contents

Introduction.....	3
Care and Safety Instructions.....	3
Product Overview.....	3
Package Contents.....	3
Specifications.....	4
At-a-Glance.....	4
Battery Information.....	5
Basic Usage.....	5
Coverage Map.....	5
Product Registration & Warranty.....	5

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Introduction

Thank you for choosing the Divine Connect Translation Receiver. This product will enable you to receive the Jumu'ah Khutbahs (sermon) while visiting Makkah and Madinah and hopefully provide you with spiritual enhancement.

Care and Safety Instructions

Read the care and safety instructions carefully before using your Divine Connect Translation Receiver and keep this User Guide for future reference.

1. Avoid using headphones at high volume. Keep the volume at a moderate level, so that you are better able to hear outside sound and are considerate of the people around you.
2. Keep your receiver away from any kinds of moisture or liquids, as this can cause electric shock and may affect the components and circuits.
3. Keep your receiver away from extreme temperatures, as this can damage the battery, warp the plastic, and melt the components inside.
4. Keep your receiver away from any dust and dirt, as this can cause damage to moving parts.
5. Do not attempt to open, disassemble, or modify the receiver, as this can cause damage and void your warranty.
6. If at any time in the future you should need to dispose of this product please do so responsibly in compliance to environmental regulations.

Product Overview

The Divine Connect Translation Receiver is a device that enables you to receive the translation of the Jumu'ah Khutbah while you are at Masjid Al Haram in Makkah and at Masjid Al Nabawi in Madinah. You can receive the Arabic Khutbah in multiple languages, live and simultaneously.

Package Contents

The following items are included with your Divine Connect Translation Receiver.

- Divine Connect Translation Receiver
- Earphones
- Lanyard
- User Guide


*Batteries NOT included

Specifications

- Height: 4.41 inches (112 mm)
- Width: 2.17 inches (55 mm)
- Depth: 0.47 inches (12 mm)
- Display: 1.69 inches (43 mm)
- Weight: 1.76 ounces (50 grams)
- Power: 2x AAA / UM4 Batteries (Not Included)

Divine Connect LLC reserves the right to amend the specifications and appearance of the device without prior notice.

At-a-Glance

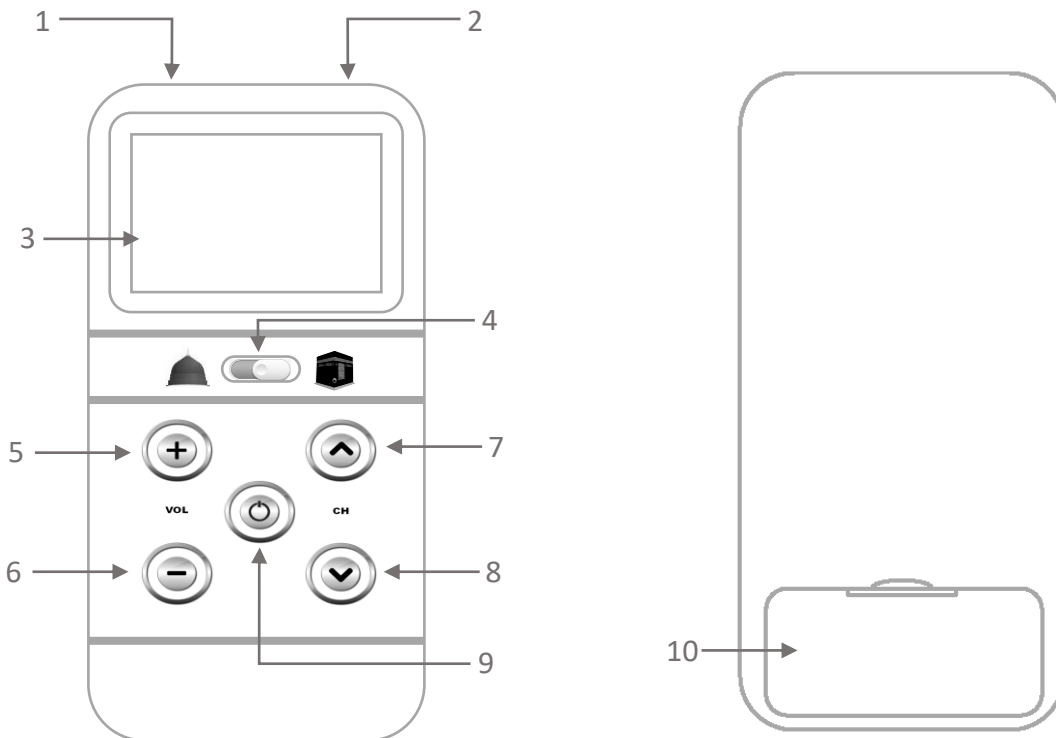

1	Earphone Port	Connect earphones here to listen to broadcast
2	Lanyard Eyelet	Connect lanyard here to hang around your neck
3	Display Screen	Displays information, channels, and languages
4	Location Switch	Slide right or left to select a location - Makkah or Madinah
5	Volume Up	Turns up the volume
6	Volume Down	Turns down the volume
7	Language Channel Up	Press to change the language channel up
8	Language Channel Down	Press to change the language channel down
9	Power	Press to turn on and off
10	Battery	2x AAA / U4 battery compartment (Batteries NOT included)

Battery Information

The receiver does not come with batteries. The battery compartment is located on the back of the device. Use your finger to gently open the lid and carefully place 2x AAA / UM4 batteries into compartment before use.

The battery power levels are shown on the front display screen. Make sure to replace the battery when the indicator level reduces to one bar. Never leave the batteries inside the device when the device is not in use for long periods of time.

Basic Usage

1. Insert the lanyard into the eyelet in order to prevent the receiver from dropping.
2. Insert 2x AAA / UM4 batteries into the battery compartment. (Batteries NOT included)
3. Press the power button, which is located in the center until the receiver turns on. Once the receiver is on the display screen will show the battery level, volume level, channel number, and language.
4. Slide the location switch to select whether you are in Makkah or Madinah. If you are in Makkah slide the switch to the right. If you are in Madinah slide the switch to the left.
5. Use the language channel up and down buttons to select the desired language.
6. Adjust the volume to your desired level and plug in your earphones to hear.

You will now be able to hear the translated Jumu'ah Khutbah live and simultaneously from Masjid Al Haram in Makkah and Masjid Al Nabawi in Madinah.

Coverage Map

For the coverage map, channel listings and the most updated list of languages available please visit www.DivineConnect.com. All languages shown in display of the device may not be available, as many of the language channels may be added in the future.

Divine Connect LLC is not responsible for broadcast related issues, service interruptions, non-availability of a language/channel and/or interchanged channel numbers. The Divine Connect Translation Receiver cannot receive translation outside of the coverage area.

Product Registration & Warranty

Registering your Divine Connect Translation Receiver will activate the limited warranty. You can register your receiver and view the limited warranty at www.divineconnect.com.